

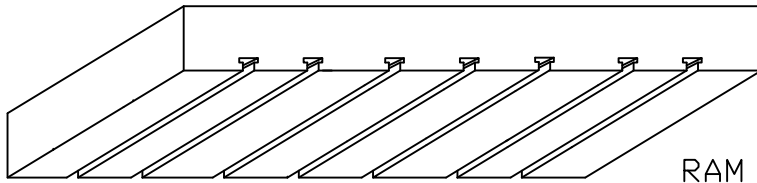
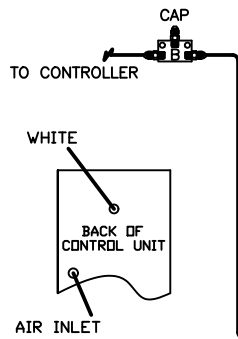





MOUNTING EXAMPLE




RAM

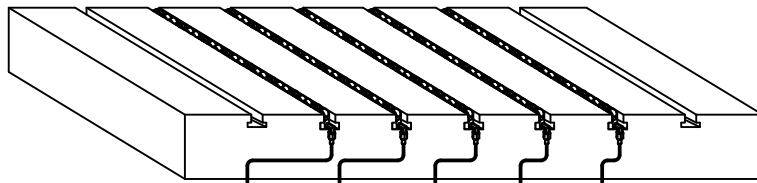


BOLSTER

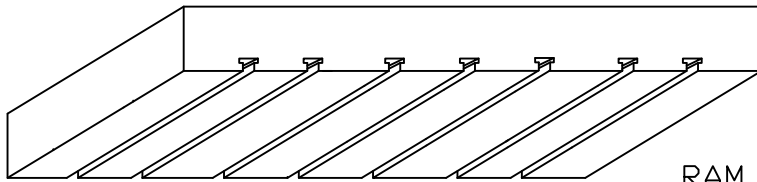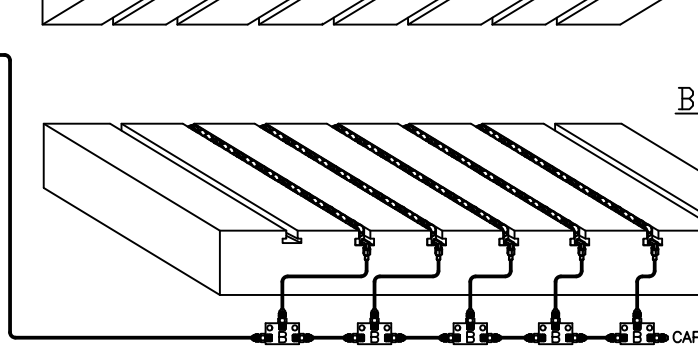

RAM

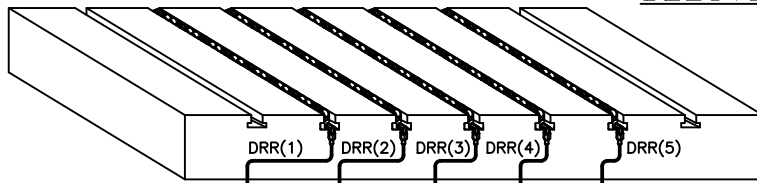

BOLSTER

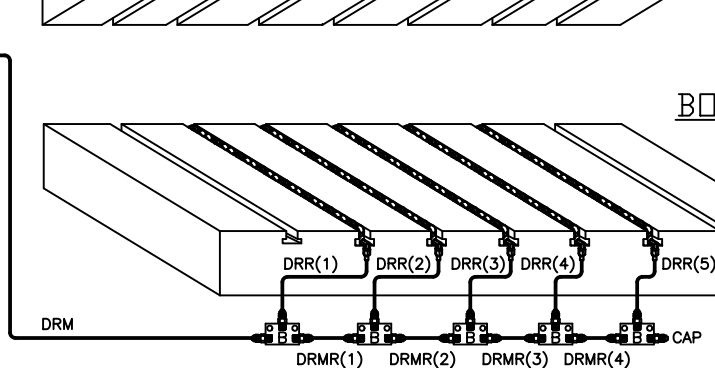


DI-5DL INSTALLATION KIT

ILLUSTRATION	QTY	PFA-ACC P/N	DESCRIPTION
B	6	HC14649	MANFOLD, FULL ASS'Y
	BOM (EACH)		
	1	HB10680 FF00019 FD1535	MANFOLD CONNECTOR, STRAIGHT CAP, 37° FLARE
E	20	FA05768	1/4"-20 HEX SCREW x 1 1/4" LONG
	20	FA30406	1/4"-20 8THD SCREW x 3/8" LONG (NOT SHOWN)

ILLUSTRATION	QTY	PFA-ACC P/N	DESCRIPTION
	1	14499-XX	NOTE: HOSE AND LOOSE FITTINGS SHIPPED IN BULK. HOSE ASSEMBLY/FABRICATION BY CUSTOMER AT THEIR FACILITY XX = LENGTH IN INCHES
	1	14499-XX	DRM-XX
	1	14499-XX	DRMR(1)-XX
	1	14499-XX	DRMR(2)-XX
	1	14499-XX	DRMR(3)-XX
	1	14499-XX	DRMR(4)-XX
	1	14499-XX	DRR(1)-XX
	1	14499-XX	DRR(2)-XX
	1	14499-XX	DRR(3)-XX
	1	14499-XX	DRR(4)-XX
	1	14499-XX	DRR(5)-XX

NOTE: WHEN SHIPPING BULK HOSE AND FITTINGS, SEND THE FOLLOWING QUANTITY OF ITEMS: HOSE, PART #H014500, 65 FEET FITTINGS, PART #FF14502, 22 PIECES

HOW TO MEASURE HOSE LENGTHS:

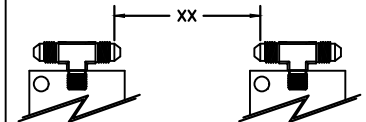

IMPORTANT: LEAVE ROOM FOR PRESS AND CLAMP MOVEMENT!

DI-5DL

NEW 6-5-12; REV. B, CHANG. QUANTITY OF MANIFOLDS NEW 9-2-14; REV. A, ADD BULK HOSE; ECU 914-38	HEM 6-16-09	PFA, INC. N118 W18251 BUNSEN DRIVE, GERMANTOWN, WI 53022 262-250-4410, 262-250-4409 (fax), pfa-inc.com
	SCALE N.T.S.	INSTALLATION KIT
SHEET 1 of 1	DRAWING NUMBER DI-5DL	