

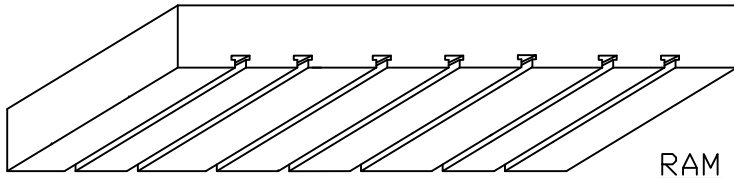
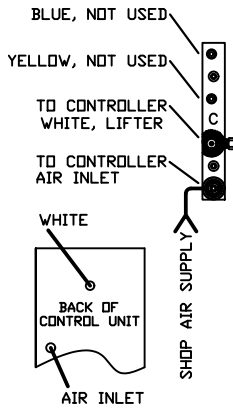



Mounting Example





RAM

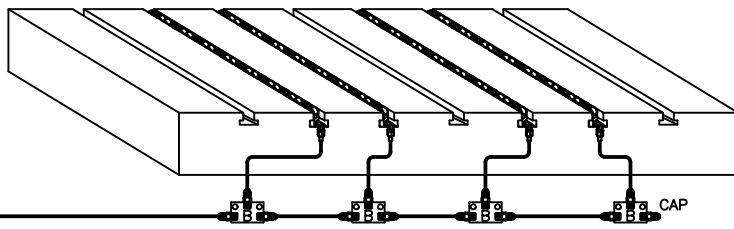

BOLSTER

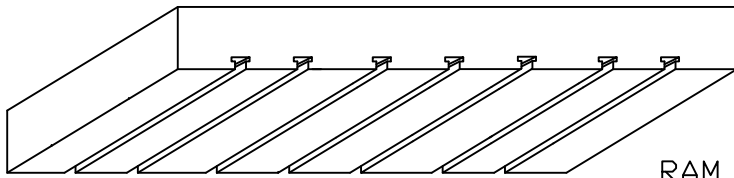

RAM

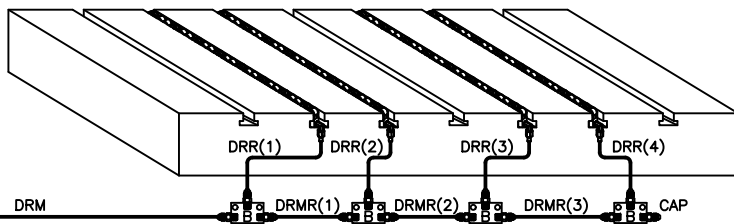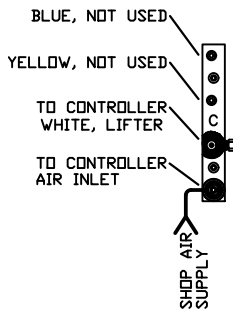


BOLSTER

DI-4DL-R INSTALLATION KIT

ILLUSTRATION	QTY	PFA-ACC P/N	DESCRIPTION
B	4	HC14649	MANIFOLD, FULL ASS'Y
	BOM (EACH)		
	1	HB10890	MANIFOLD CONNECTOR, STRAIGHT CAP, 37" FLARE
	1	FFD0019	CONNECTOR, 1/8M x JIC
C	1	HLO2711W	MANIFOLD, FULL ASS'Y
	BOM (EACH)		
	1	HB02710	MANIFOLD CONNECTOR, 1/8M x JIC
	1	FFD0011	CONNECTOR, 1/8M x 1/8M
E	14	FA05788	JIFFY CLIP (NOT SHOWN)
	14	FA30406	1/4-20 BTHD SCREW x 3/8" LONG (NOT SHOWN)

ILLUSTRATION	QTY	PFA-ACC P/N	DESCRIPTION
			NOTE: HOSE AND LOOSE FITTINGS SHIPPED IN BULK. HOSE ASSEMBLY/FABRICATION BY CUSTOMER AT THEIR FACILITY. XX = LENGTH IN INCHES
DRM-XX	1	14499-XX	XX =
DRMR(1)-XX	1	14499-XX	XX =
DRMR(2)-XX	1	14499-XX	XX =
DRMR(3)-XX	1	14499-XX	XX =
DRR(1)-XX	1	14499-XX	XX =
DRR(2)-XX	1	14499-XX	XX =
DRR(3)-XX	1	14499-XX	XX =
DRR(4)-XX	1	14499-XX	XX =

NOTE: WHEN SHIPPING BULK HOSE AND FITTINGS, SEND THE FOLLOWING QUANTITY OF ITEMS: HOSE, PART #HO14500, 50' FITTINGS, PART #FF14502, 18 PIECES

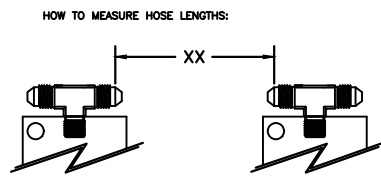

IMPORTANT! LEAVE ROOM FOR PRESS AND CLAMP MOVEMENT!

DI-4DL-R

HEM 8-14-20	PFA, INC. N118 V18251 BUNSEN DRIVE, GERMANTOWN, VI. 53022 262-250-4410, 262-250-4409 (Fax), pfa-inc.com
SCALE N.T.S.	INSTALLATION KIT
SHEET 1 of 1	DRAWING NUMBER DI-4DL-R