MOUNTING EXAMPLE

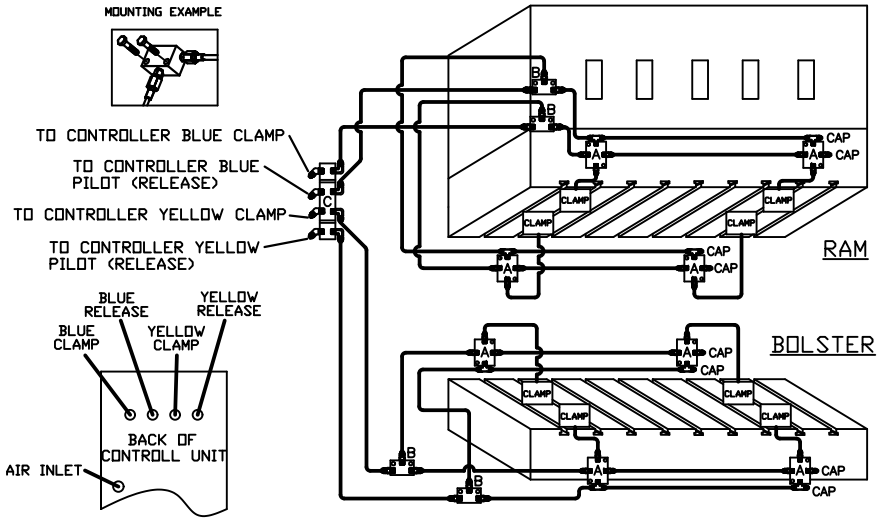

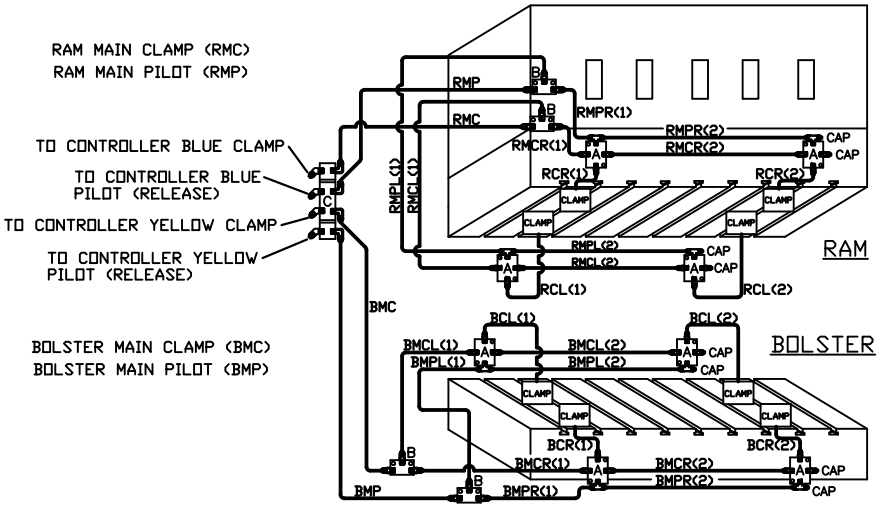

DI-4C4C INSTALLATION KIT

	ILLUSTRATION	QTY	PFA-ACC P/N	DESCRIPTION
A		8	HC41973	CHECK VALVE, FULL ASS'Y
		BOM (EACH)		
		1	HE41973	CHECK VALVE ASS'Y
		2	FF01835	CAP, 37° FLARE
		2	FA80200	1/4-20 HEX SCREW x 1 1/4" LONG
B		4	HC14649	MANIFOLD, FULL ASS'Y
		BOM (EACH)		
		1	HB10680	MANIFOLD
		3	FF00019	CONNECTOR, STRAIGHT
		1	FF01835	CAP, 37° FLARE
		2	FA80200	1/4-20 HEX SCREW x 1 1/4" LONG
C		1	HC10050	MANIFOLD, FULL ASS'Y
		BOM (EACH)		
		1	HB10050	MANIFOLD
		4	FF00063	CONNECTOR, ELBOW 90°
		4	FF00070	CONNECTOR, ELBOW, 45°
		2	FA80224	1/4-20 HEX SCREW x 1 1/2" LONG
D		14	FA08237	DOUBLE JIFFY CLIP (NOT SHOWN)

※ CHECK VALVE ASS'Y, SEE NOTE BELOW

	ILLUSTRATION	QTY	PFA-ACC P/N	DESCRIPTION
E		8	FA05788	JIFFY CLIP (NOT SHOWN)
F		22	FA30408	1/4-20 STHD SCREW x 3/8" LONG (NOT SHOWN)
				NOTE: HOSE AND LOOSE FITTINGS SHIPPED IN BULK, HOSE ASSEMBLY/ FABRICATION BY CUSTOMER AT THEIR FACILITY XX = LENGTH IN INCHES
	RMC-XX	1	14499-XX	XX =
	RMP-XX	1	14499-XX	XX =
	RMCR(1)-XX	1	14499-XX	XX =
	RMPR(1)-XX	1	14499-XX	XX =
	RMPR(2)-XX	1	14499-XX	XX =
	RMCR(2)-XX	1	14499-XX	XX =
	RCR(1)-XX	1	14499-XX	XX =
	RCR(2)-XX	1	14499-XX	XX =
	RMCL(1)-XX	1	14499-XX	XX =
	RMPL(1)-XX	1	14499-XX	XX =
	RMCL(2)-XX	1	14499-XX	XX =
	RMPL(2)-XX	1	14499-XX	XX =
	RCL(1)-XX	1	14499-XX	XX =
	RCL(2)-XX	1	14499-XX	XX =
	BMC-XX	1	14499-XX	XX =
	BMP-XX	1	14499-XX	XX =
	BMCR(1)-XX	1	14499-XX	XX =

ILLUSTRATION	QTY	PFA-ACC P/N	DESCRIPTION
	1	14499-XX	XX =
	1	14499-XX	XX =
	1	14499-XX	XX =
	1	14499-XX	XX =
	1	14499-XX	XX =
	1	14499-XX	XX =
	1	14499-XX	XX =
	1	14499-XX	XX =
	1	14499-XX	XX =
	1	14499-XX	XX =
	1	14499-XX	XX =

NOTE: WHEN SHIPPING BULK HOSE AND FITTINGS, SEND THE FOLLOWING QUANTITY OF ITEMS;
HOSE, PART #H014500, 130 FEET
FITTINGS, PART #FF14502, 58 PIECES

HOW TO MEASURE HOSE LENGTHS:

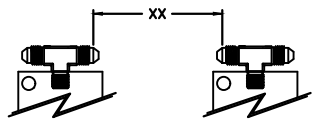

IMPORTANT: LEAVE ROOM FOR PRESS AND CLAMP MOVEMENT!

※ NOTE: CHECK VALVE ASS'Y NOT INCLUDED AS PART OF THE INSTALL KIT, ORDER CHECK VALVES SEPARATELY.

DI-4C4C

HDN 2-24-04 REV. B CHANGE BULK HOSE, DCN 614-39		PFA, INC. 4800 WISCH BUNSEN DRIVE, GERMANTOWN, WI. 53022 262-255-4400, 262-255-4499 (FAX), pfa-inc.com
REVISED HDN 7-8-11 REVISE PER ECN 651-07	HDN 8-26-11	
	SCALE N.T.S.	INSTALLATION KIT
	SHEET 1 of 1	DRAWING NUMBER DI-4C4C