DI-8X8S INSTALLATION KIT

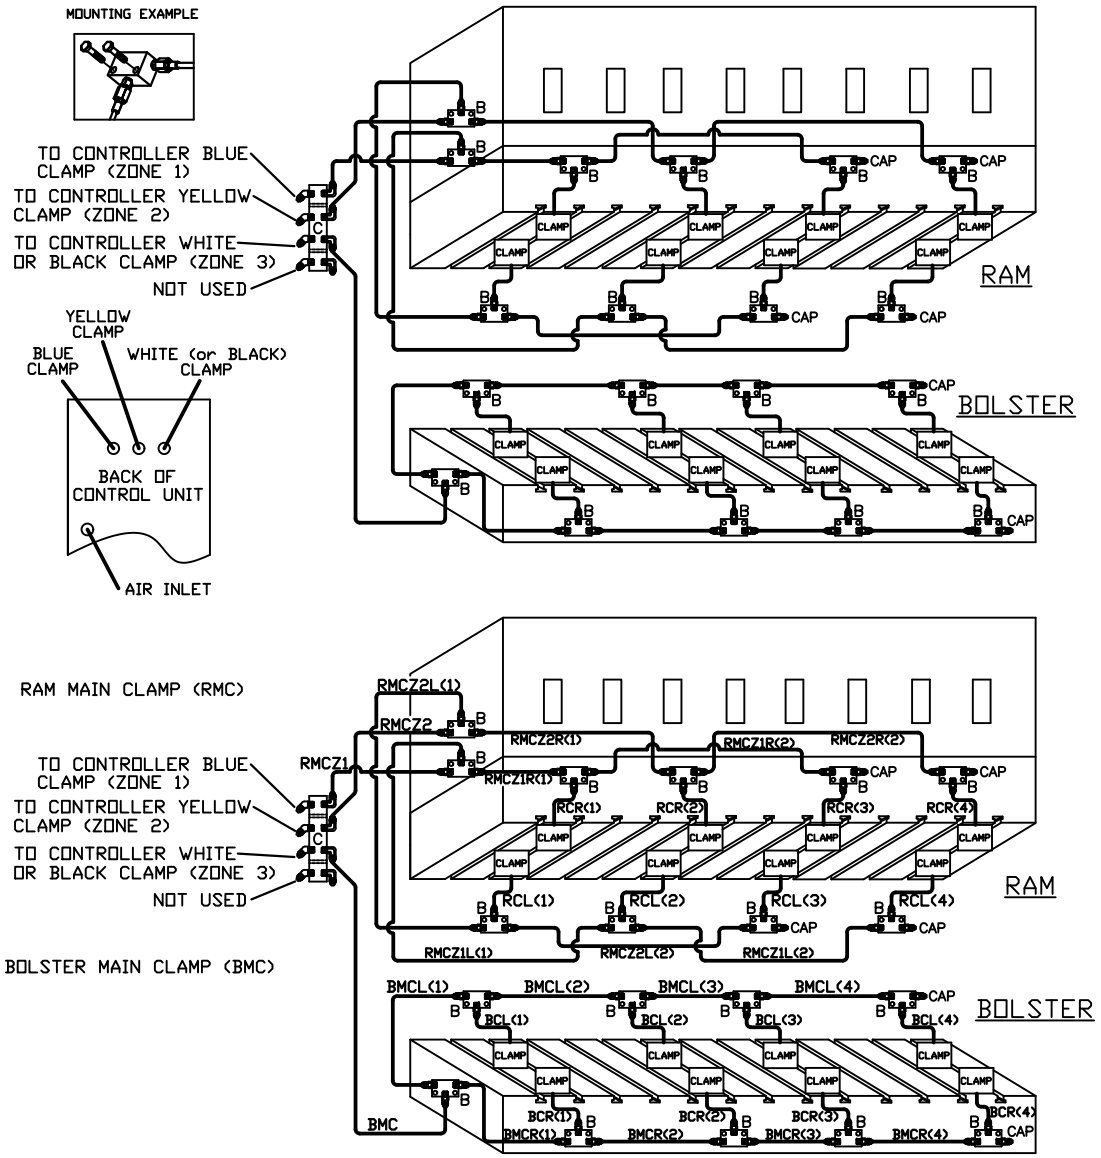

	ILLUSTRATION	QTY	PFA-ACC P/N	DESCRIPTION
B		19	HC14649	MANIFOLD, FULL ASS'Y
			BOM (EACH)	
		1	HB10880	MANIFOLD
		3	FF00019	CONNECTOR, STRAIGHT
		1	FF01835	CAP, 37° FLARE
		2	FA80200	1/4-20 HEX SCREW x 1 1/4" LONG
C		1	HC10050	MANIFOLD, FULL ASS'Y
			BOM (EACH)	
		1	HB10050	MANIFOLD
		4	FF00083	CONNECTOR, ELBOW 90°
		4	FF00070	CONNECTOR, ELBOW, 45°
		4	FF01835	CAP, 37° FLARE
		2	2214793	STICKER, BLUE
		2	2214792	STICKER, YELLOW
		2	2214794	STICKER, WHITE
		2	2214791	STICKER, BLACK
		2	FA80224	1/4-20 HEX SCREW x 1 1/2" LONG
D		20	FA06237	DOUBLE JIFFY CLIP (NOT SHOWN)
E		14	FA05768	JIFFY CLIP (NOT SHOWN)
F		34	FA30406	1/4-20 BTHD SCREW x 3/8" LONG (NOT SHOWN)

ILLUSTRATION	QTY	PFA-ACC P/N	DESCRIPTION
			NOTE: HOSE AND LOOSE FITTINGS SHIPPED IN BULK, HOSE ASSEMBLY/ FABRICATION BY CUSTOMER AT THEIR FACILITY XX = LENGTH IN INCHES
	1	14409-XX	XX =
RMCZ1-XX	1	14409-XX	XX =
RMCZ2-XX	1	14409-XX	XX =
RMCZ1R(1)-XX	1	14409-XX	XX =
RMCZ1L(1)-XX	1	14409-XX	XX =
RMCZ1R(2)-XX	1	14409-XX	XX =
RMCZ1L(2)-XX	1	14409-XX	XX =
RMCZ2L(1)-XX	1	14409-XX	XX =
RMCZ2R(1)-XX	1	14409-XX	XX =
RMCZ2L(2)-XX	1	14409-XX	XX =
RMCZ2R(2)-XX	1	14409-XX	XX =
RCR(1)-XX	1	14409-XX	XX =
RCR(2)-XX	1	14409-XX	XX =
RCR(3)-XX	1	14409-XX	XX =
RCR(4)-XX	1	14409-XX	XX =
RCL(1)-XX	1	14409-XX	XX =
RCL(2)-XX	1	14409-XX	XX =
RCL(3)-XX	1	14409-XX	XX =
RCL(4)-XX	1	14409-XX	XX =
BMC-XX	1	14409-XX	XX =
BMCR(1)-XX	1	14409-XX	XX =
BMCR(2)-XX	1	14409-XX	XX =
BMCR(3)-XX	1	14409-XX	XX =
BMCR(4)-XX	1	14409-XX	XX =
BMCL(1)-XX	1	14409-XX	XX =
BMCL(2)-XX	1	14409-XX	XX =
BMCL(3)-XX	1	14409-XX	XX =
BMCL(4)-XX	1	14409-XX	XX =
BCR(1)-XX	1	14409-XX	XX =
BCR(2)-XX	1	14409-XX	XX =
BCR(3)-XX	1	14409-XX	XX =
BCR(4)-XX	1	14409-XX	XX =
BCL(1)-XX	1	14409-XX	XX =
BCL(2)-XX	1	14409-XX	XX =
BCL(3)-XX	1	14409-XX	XX =
BCL(4)-XX	1	14409-XX	XX =

NOTE: WHEN SHIPPING BULK HOSE AND FITTINGS, SEND THE FOLLOWING QUANTITY OF ITEMS;
HOSE, PART #HO14500, 200'
FITTINGS, PART #FF14502, 74 PIECES

HOW TO MEASURE HOSE LENGTHS:

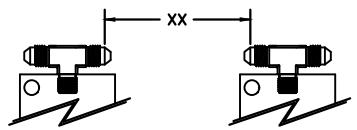

IMPORTANT: LEAVE ROOM FOR PRESS AND CLAMP MOVEMENT!

DI-8X8S

8-18-09 REV. A ADD BULK HOSE & FITTING NOTE PER ECN #08-28	HEN 6-16-09	PFA, INC. N118 W18251 BUNSEN DRIVE, GERMANTOWN, WI. 53022 262-250-4410, 262-250-4409 (Fax), pfa-inc.com
	SCALE N.T.S.	INSTALLATION KIT
	SHEET 1 of 1	DRAWING NUMBER DI-8X8S